


**Are you using timber as a**

All timber inside a cavity must be H3 treated.  
Refer to James Hardie, Weathertex and CSR information.

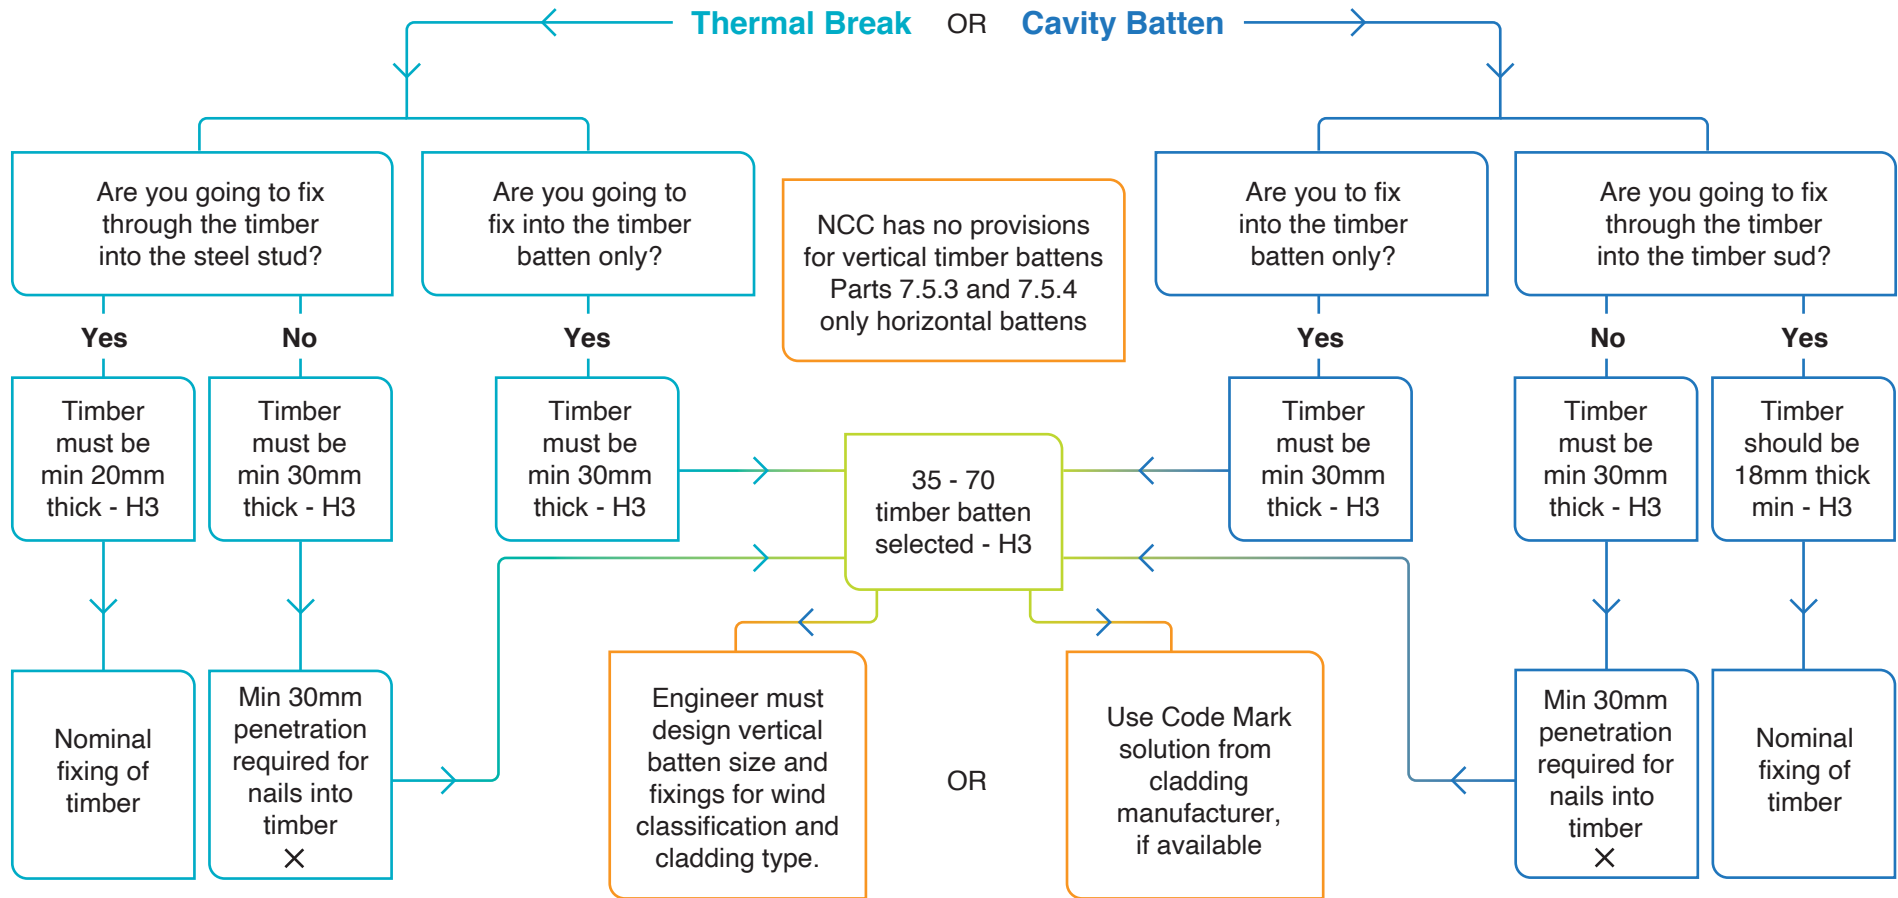

All solutions create a cavity and therefore require a drained and ventilated cavity to meet the cladding manufacturer requirements and warranties.